

Partybox200/300 software version: 32

This upgrade improves:

- Fix the EQ issue on software V24
- Fix Vol-sync issue in BT-mode: At maximum vol-level, if BT-disconnect and re-connect will lead the volume un-sync
- General improvements and bugfixes.

How to upgrade

1. Unzip the Partybox 200-300_Software upgrade V32 with 2nd Generation HW.zip file.
2. Place the "Harman_G15.HUI" file into the root directory of an empty USB-stick.
 - You need to make sure the USB-Stick is completely empty of folders or other files.
3. Connect your Partybox to mains power.
4. Power ON your Partybox speaker.
5. Insert the USB-stick into the USB socket placed on the rear side of the Partybox.
6. Press the Volume+ & Bluetooth buttons simultaneously for more than 10 seconds.
 - The unit will enter DFU mode and begins the upgrade (All panel LEDs show constant white light).
7. It takes around 7 minutes to complete the upgrade.
 - Your Partybox speaker may automatically restart itself after a successful upgrade.

Check you're software version

When the Partybox is powered ON, then press the Volume- & Bass-boost buttons simultaneously for more than 2 seconds. Your Partybox speaker will pronounce a software version by voice, and it should be the following numbers: **32.12.19**

If the numbers are not matching, try to do the upgrade again. In case your device doesn't upgrade, call our Customer support for more guidance.